BOSCH



Washing machine

WGG2440SGB
WGG24400GB


[en] User manual and installation instructions

Further information and explanations are available online:

6 Familiarising yourself with your appliance

6.1 Appliance

You can find an overview of the parts of your appliance here.

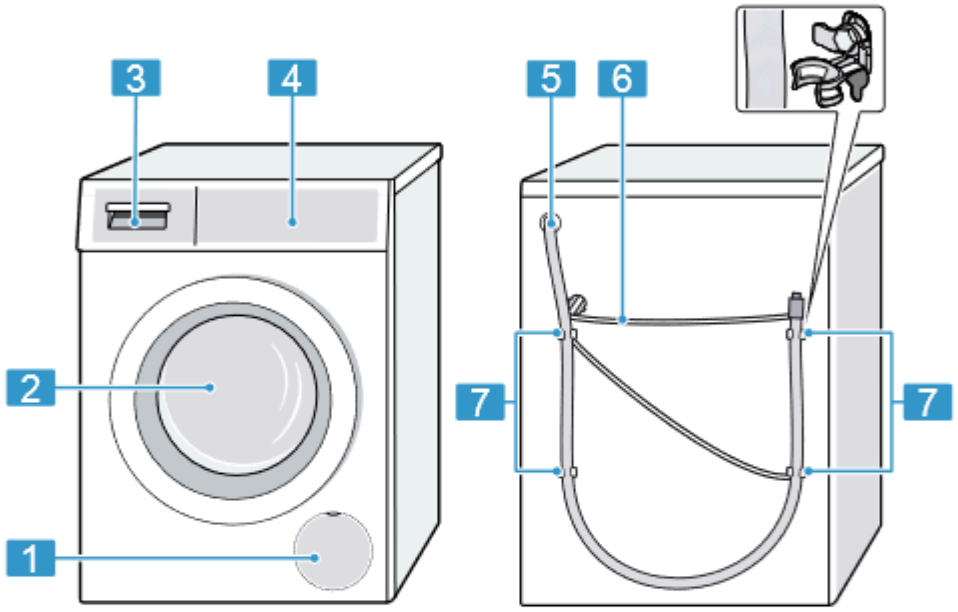


On certain models, specific details such as the colour and shape may differ from those pictured.

1	Maintenance flap for the drain pump → *Page 34*
2	Door
3	Detergent drawer → *Page 18*
4	Control panel → *Page 19*
5	Water outlet hose → *Page 15*
6	Power cord → *Page 15*
7	Transit bolts → *Page 13*

6.2 Detergent drawer

Note: Observe the manufacturer's instructions on the use and dosage of the detergent and care product and the information in the programme descriptions.


Further information and explanations are available online:

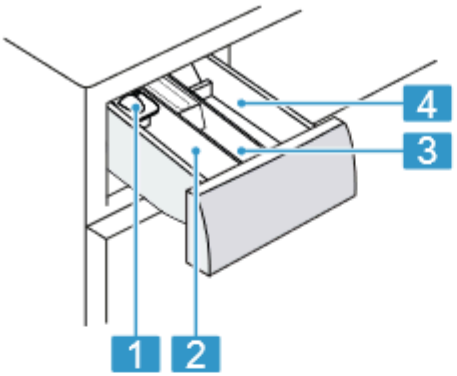

1	Measuring aid for liquid detergent → *"Inserting the measuring aid for liquid detergent", Page 29*
2	Dispenser II: detergent for the main wash
3	Compartment ❀: Fabric softener
4	Compartment I: Detergent for prewash

6.3 Control panel

You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.

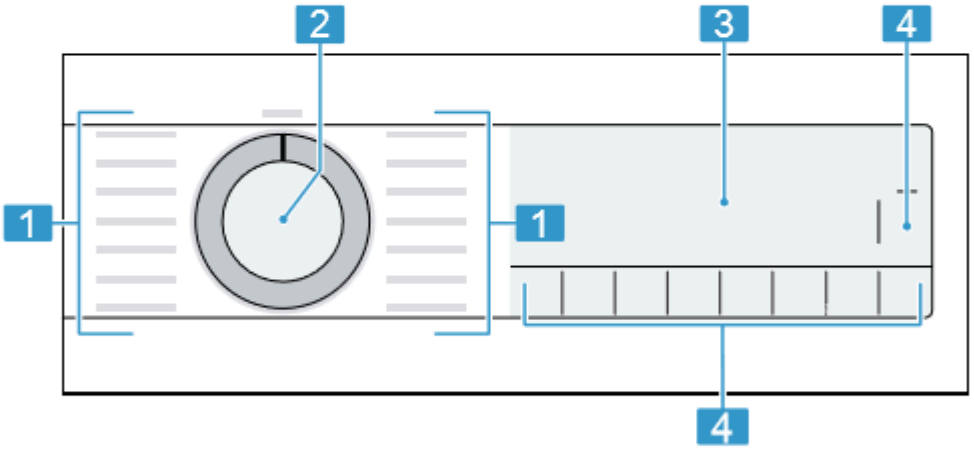


1	Programmes → *Page 24*
2	Programme selector → *Page 29*
3	Display → *Page 20*
4	Buttons → *Page 22*

Further information and explanations are available online:

7 Display

The display shows the current settings, options or relevant information.

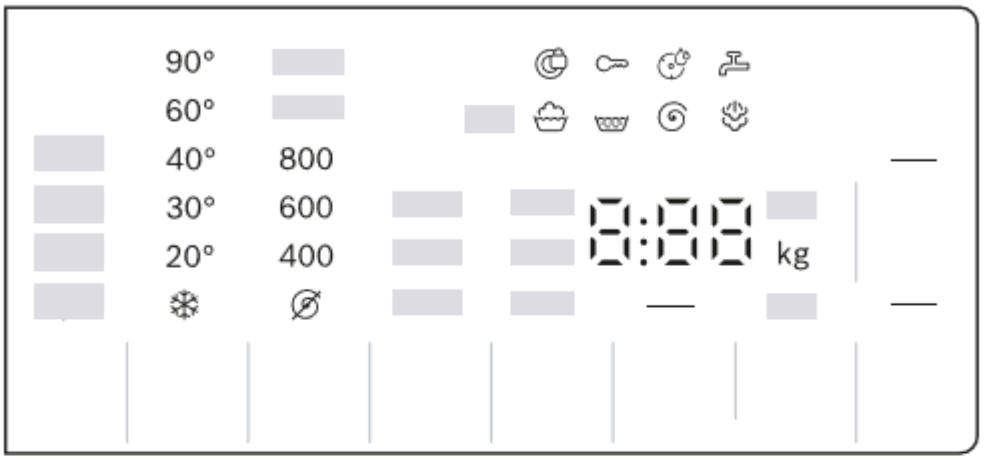

Example: Display

Display	Description
0:40 [1]	Expected programme duration or programme time remaining in hours and minutes.
— [1]	Program end time → *"Buttons", Page 22*
9.0 [1]	Recommendation for the maximum load capacity for the selected program in kg.
⌀ - 1400	Set spin speed in rpm. → *"Buttons", Page 22* ⌀: No spin cycle, draining only
❄ - 90	Set temperature in °C. → *"Buttons", Page 22* ❄ (cold)
—	Start, cancel or pause ▪ Lights up: The programme is running and can be cancelled or paused. ▪ Flashes: The programme can be started or continued.
	Programme status: Prewashing
	Programme status: Washing
	Programme status: Rinsing
[1] Example	

Further information and explanations are available online:

Display	Description
	Programme status: Spinning
End	Programme status: Programme end
	Programme status: Steaming
	■ Lights up: The childproof lock is activated. ■ Flashes: The childproof lock is activated and the appliance has been operated. → *"Deactivating the childproof lock", Page 32*
—	The crease-reduction function is activated. → *"Buttons", Page 23*
—	Additional rinse cycle is activated. → *"Buttons", Page 22*
—	Prewash is activated. → *"Buttons", Page 22*
	Rinse Hold is activated.
—	Shortened programme length is activated. → *"Buttons", Page 22*
	The "Blood" stain type is activated.
	The "Grass" stain type is activated.
	The "Red wine" stain type is activated.
	The "Cooking fat/cooking oil" stain type is activated.
	Flashes: Drum cleaning is required. Run the Drum Clean programme for cleaning and caring for the drum and the outer tub. → *"Cleaning the drum", Page 33*
:	Flashes: The voltage control system has paused the programme due to impermissible voltage drops. → *": flashes.", Page 38* **Note:** The programme continues when the voltage is permissible again.
	■ Lights up: The door is locked and cannot be opened. ■ Flashes: The door is not closed properly. ■ Off: The door is unlocked and can be opened.
	■ No water pressure. → *"E:30 / -10 and/or ", Page 38* ■ The water pressure from the tap is too low.
E:35 / -10[1]	Error code, error display, signal. → *"Troubleshooting", Page 37*

[1] Example

Further information and explanations are available online:

8 Buttons

The selection of programme settings depends on the programme that is set.

Button	Selection	More information
Start / Reload	▪ Start ▪ Cancel ▪ Pause	Start, cancel or pause the programme.
Speed Perfect	▪ Activate ▪ Deactivate	Activate or deactivate a shorter programme duration. **Note:** Energy consumption increases. The washing result is not affected by this.
Finish in	Up to 24 hours	Set the programme end time. The programme duration is already included in the set number of hours. Once the programme has started, the programme duration is displayed.
Temp °C	❄ - 90	Adjust the temperature. Set temperature in °C.
Spin Speed	- 1400	Adjust the spin speed or deactivate the spin cycle. Set spin speed in rpm. If is selected, the water is drained and the spin cycle is deactivated. The laundry stays wet inside the drum.
3 sec.	▪ Activate ▪ Deactivate	→ *"Childproof lock", Page 32*
Prewash	▪ Activate ▪ Deactivate	Activate or deactivate prewash, e.g. for washing heavily soiled laundry. **Note:** Add the detergent for the prewash in compartment I and the detergent for the main wash in compartment II of the detergent drawer. → *"Detergent drawer", Page 18*
Extra Rinse	▪ Activate ▪ Deactivate	Activate or deactivate an additional rinse cycle. Recommended for particularly sensitive skin or in regions with very soft water.

Further information and explanations are available online:

Button	Selection	More information
Reduced Ironing	▪ Activate ▪ Deactivate	Activate or deactivate the reduced creasing programme. In order to reduce creasing in the laundry, the spin cycle and the spin speed are adapted. **Note:** The laundry has a higher residual moisture after washing. To reduce creasing, hang up the laundry immediately after washing.

Further information and explanations are available online:

9 Programmes

Note: The laundry's care labels provide you with additional information on programme selection.

Programme	Description	Max. load (kg)
Cottons	Wash hard-wearing items made of cotton, linen or blended fabrics. Also suitable as a short programme for normally soiled laundry when you activate Speed Perfect. Programme setting: ▪ Max. 90 °C ▪ Max. 1400 rpm	9.0 5.0 [1]
Eco 40-60	Wash items made from cotton, linen or blended fabrics. **Note:** Fabrics which can be washed from 40 °C up to 60 °C as per the care symbol can be washed together. The washing performance corresponds to the best possible washing performance class according to the legal requirements. For this programme, the washing temperature is automatically adjusted depending on the load size, in order to achieve the best possible energy efficiency with the best possible washing result. You cannot change the washing temperature. Programme setting: **Note:** The temperature cannot be adjusted in this programme and is set automatically. ▪ Max. - °C ▪ Max. 1400 rpm	9.0
Easy Care	Wash items made from synthetic or blended fabrics. Programme setting: ▪ Max. 60 °C ▪ Max. 1200 rpm	4.0
Mixed Load	Wash items made from cotton, linen, or synthetic or blended fabrics. Suitable for lightly soiled laundry.	4.0

[1] **Speed Perfect** activated
[2] Washing not possible

Further information and explanations are available online:

Programme	Description	Max. load (kg)
	Programme setting: ▪ Max. 60 °C ▪ Max. 1400 rpm	
Delicates / Silk	Wash delicate, washable items made from silk, viscose and synthetic fabrics. Use a detergent that is suitable for delicates or silk. **Note:** Wash especially delicate items or items with hooks, eyelets or clips in a mesh laundry bag. Programme setting: ▪ Max. 40 °C ▪ Max. 800 rpm	2.0
Wool	Hand- or machine-washable items that are made from wool or contain wool. To prevent the laundry from shrinking, the drum moves the items very gently with long pauses. Use a detergent that is suitable for wool. Programme setting: ▪ Max. 40 °C ▪ Max. 800 rpm	2.0
Rinse	Rinse and then spin the laundry, and drain the water. Programme setting: Max. 1400 rpm	–
Spin / Drain	Spin the laundry and drain the water. If you only want to drain the water, activate . The laundry is not spun. Programme setting: Max. 1400 rpm	–
Hygiene Plus	Wash hard-wearing items made of cotton, linen or blended fabrics. Suitable for allergy sufferers and for strict hygiene requirements. **Note:** Once the set temperature has been reached, it remains constant throughout the entire washing process. Programme setting: ▪ Max. 60 °C ▪ Max. 1400 rpm	–
Sportswear	Wash sports and leisure items made from synthetic fibres, microfibre or fleece. Use a detergent that is suitable for sports items.	2.0

[1] **Speed Perfect** activated
[2] Washing not possible

Further information and explanations are available online:

Programme	Description	Max. load (kg)
	Do not use fabric softener. **Tip:** Use the Easy Care programme to wash heavily soiled laundry. Programme setting: ▪ Max. 40 °C ▪ Max. 800 rpm	
Iron Assist (Easy Ironing Steam Assisted)	Suitable for shirts, T-shirts and similar fabrics made from cotton, linen or blended fabrics. Programme for warming and steaming dry items using steam in order to hang them up once the programme has ended or to make them easier to iron. The programme's maximum load is five shirts or five t-shirts. Activate Speed Perfect if you only want to steam one item of laundry. **Notes** ▪ Immediately after the programme ends, hang up the warm, steamed items or iron them. ▪ The laundry is not washed or cleaned. Do not use any detergent or cleaning products. ▪ The steam is hot and may cause damage to certain fabrics or fabric types. The programme is therefore not suitable for outdoor clothing or items made from silk or wool, such as jumpers.	- [2]
Jeans	Wash dark-coloured and colour-intense items made from cotton or easy-care fabric, e.g. jeans. Turn laundry inside-out before washing. Use liquid detergent. Programme setting: ▪ Max. 40 °C ▪ Max. 1200 rpm	4.0
Drum Clean	Clean and care for the drum. Use this programme in the following cases: ▪ Before using the appliance for the first time ▪ If you regularly wash at temperatures of 40 °C or lower ▪ After a prolonged period of non-use	– [2]

[1] **Speed Perfect** activated
[2] Washing not possible

Further information and explanations are available online:

Programme	Description	Max. load (kg)
	Use washing powder containing oxygen bleach. Add the washing powder containing oxygen bleach to compartment II for the main wash. → *"Detergent drawer", Page 18* Halve the amount of detergent to avoid foaming. Do not use fabric softener. Do not use liquid detergent or detergent that is intended for woollens or delicates. **Note:** The drum cleaning indicator flashes to remind you if you have not used a programme at 60 °C or higher for a long time.	
Super Quick 15'/30"	Wash items made from cotton, or synthetic or blended fabrics. Short programme for small items of lightly soiled laundry. The programme duration is approx. 30 minutes. If you wish to reduce the programme duration to 15 minutes, activate Speed Perfect. The maximum load is reduced to 2.0 kg. Programme setting: ▪ Max. 40 °C ▪ Max. 1200 rpm	4.0 2.0[1]

[1] **Speed Perfect** activated
[2] Washing not possible

Further information and explanations are available online:

11 Laundry

11.1 Preparing the laundry

ATTENTION!
Objects remaining in the laundry may damage the laundry and the drum.
- ▸ Remove all items from any pockets in your laundry before using the appliance.

Note
The appliance and fabrics are protected when you prepare your laundry.
- Brush off sand and soil
- Sort the laundry according to colour and textiles and observe the care labels
- Close all zips, hook and loop fasteners, hooks and eyes
- Tie cloth belts, cloth straps and cords together
- Remove curtain fittings and lead strips
- Wash small or particularly delicate items in a mesh washing bag
- Wash large and small items of laundry together
- Wash laundry with fresh stains immediately
- Pretreat laundry with dried stains and wash several times
- Load the laundry unfolded into the drum
- Before loading the drum, any laundry that has been pre-treated with chlorine bleach should be rinsed several times

Further information and explanations are available online:

12 Detergents and care products

The manufacturer's instructions for use and dosage can be found on the packaging.

Notes

- When using liquid detergents, only use liquid detergents that are self-flowing
- Do not mix different liquid detergents
- Do not mix detergent and fabric softener
- Do not use products that have expired or are highly congealed
- Do not use products containing solvents, caustic agents or volatile substances
- Do not use chlorine bleach
- Do not use dyes regularly as fixing salt can damage stainless steel
- Do not use color-bleaching agents in the appliance

13 Basic operation

13.1 Switching on the appliance

Requirement: The appliance has been correctly installed and connected.
→ *"Installation and connection", Page 12*

- ▸ Turn the programme selector to a programme.

13.2 Setting a programme

1. Turn the programme selector and set the required programme.
   → *"Programmes", Page 24*
2. If required, adjust the programme settings.
   → *"Adjusting the programme settings", Page 29*

13.3 Adjusting the programme settings

Requirement: A programme has been set.
→ *"Setting a programme", Page 29*

- ▸ Adjust the programme settings.
  → *"Buttons", Page 22*

Note: The programme settings are not saved permanently for the programme.

13.4 Loading laundry

Note: To prevent creasing, note the maximum load for the programmes.
→ *"Programmes", Page 24*

Requirements

- The laundry is prepared and sorted.
  → *"Laundry", Page 28*
- The drum is empty.

1. Open the door.
2. Place the laundry in the drum.
3. Close the door.

   Ensure that there is no laundry trapped in the door.


13.5 Inserting the measuring aid for liquid detergent

If you order the measuring aid as an accessory, you must use the measuring aid.


1. Pull out the detergent drawer.

Further information and explanations are available online:

2. Press down on the insert and remove the detergent drawer.

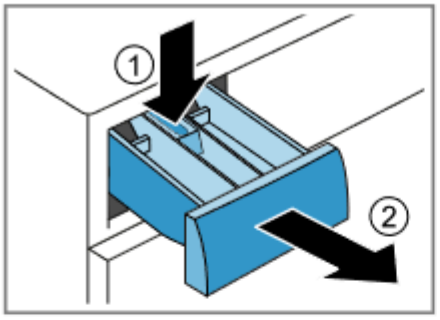

3. Insert the measuring aid.

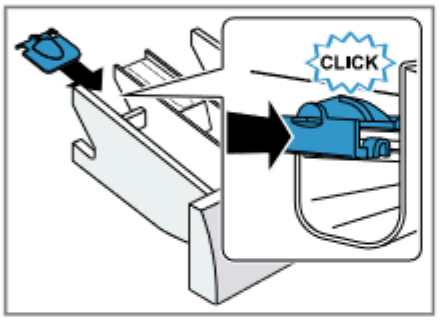


4. Insert the detergent drawer.


13.6 Use the measuring aid for liquid detergent

To add liquid detergent, you can use a measuring aid in the detergent drawer.

1. Pull out the detergent drawer.
2. Slide the measuring aid forwards.

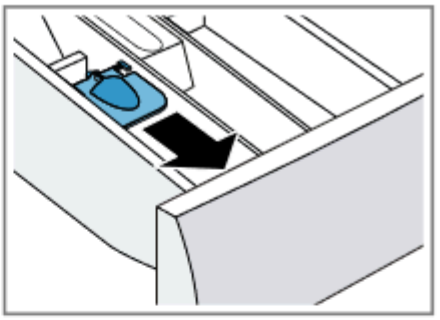

3. Fold the measuring aid down and click it into place.

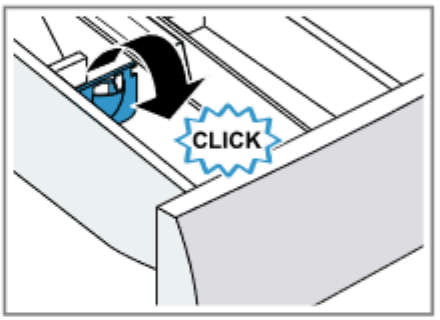

4. Push in the detergent drawer.

13.7 Adding detergent and care product

Notes

- Do not use the measuring aid for liquid detergent for gel detergents, washing powder, or if Prewash or "Ready in" time are activated.
- Observe the information about detergents and care products → *Page 29*.

1. Pull out the detergent drawer.
2. Pour in detergent. → *"Detergent drawer", Page 18*
3. If required, add the care product.
4. Push in the detergent drawer.

Further information and explanations are available online:

13.8 Starting the programme

Requirement: A programme is set.
→ *"Setting a programme", Page 29*

- ▸ Press ▷II **Start** / **Reload**.
- ✓ The drum rotates and load detection takes place. This can take up to 2 minutes, after which water enters the drum.
- ✓ The display shows the programme duration or the programme end time.
- ✓ After the programme has ended, the display shows: End.

13.9 Adding laundry

After the programme starts, you can remove or add laundry depending on the programme status.

1. Press ▷II **Start** / **Reload**.

   The appliance pauses.

   Note: If you want to add laundry, follow the instructions on the display.
   → *"Display", Page 21*
2. Open the door.
3. Add or remove laundry.
4. Close the door.
5. Press ▷II **Start** / **Reload**.

13.10 Cancelling the programme

1. Press ▷II **Start** / **Reload**.
2. Open the door.

   The appliance door remains locked for safety reasons if the temperature and water levels are high.
   - If the temperature is high, start the **Rinse** programme.
   - If the water level is high, start the **Spin** programme or select a suitable programme for draining.
     → *"Programmes", Page 24*
3. Remove the laundry.
   → *"Unloading the laundry", Page 31*

13.11 Resuming the programme when the programme status is Rinse Hold

Requirements

- Rinse Stop is activated.
- The last rinse cycle of the set programme has ended and the laundry is in the rinsing water.


1. Set the **Spin** programme or a programme for draining the water.
   → *"Programmes", Page 24*
2. Press ▷II **Start** / **Reload**.

13.12 Unloading the laundry

1. Open the door.
2. Remove the laundry from the drum.

13.13 Switching off the appliance

1. Turn the programme selector to **Off**.
2. Turn off the tap.
3. Wipe the rubber gasket dry and remove any foreign objects.

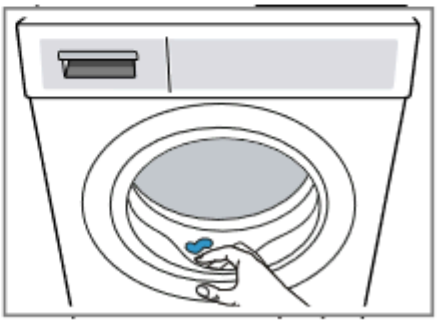

Further information and explanations are available online:

4. Leave the appliance door and detergent drawer open so that residual water can evaporate.

14 Childproof lock

Secure your appliance against being operated unintentionally using the controls.

14.1 Activating the childproof lock

- ▸ Press on both ⊂⊃ **3 sec.** buttons for approx. three seconds.
- ✓ The display shows ⊂⊃.
- ✓ The control elements are locked.
- ✓ The childproof lock remains active even after the appliance has been switched off and in the event of a power cut.

14.2 Deactivating the childproof lock

Requirement: To deactivate the childproof lock, the appliance must be switched on.


- ▸ Press on both ⊂⊃ **3 sec.** buttons for approx. three seconds.

  So that the programme currently running is not cancelled, the programme selector must be set to the initial programme.
- ✓ ⊂⊃ goes out in the display.

15 Basic settings

You can configure the basic settings for your appliance to meet your needs.

15.1 Overview of the basic settings

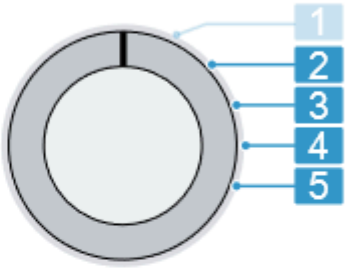

Programme selector with programme positions

2	Set the volume of the signal at the end of the programme: 0 (off) to 4 (very loud)
3	Set the volume of the signal tone emitted when the buttons are pressed: 0 (off) to 4 (very loud)
4	Activate (On) or deactivate (OFF) the reminder to clean the drum.
5	Display the number of finished programmes.

15.2 Changing the basic settings

1. Set the programme selector to position 1. → *Page 32*

Further information and explanations are available online:

2. Press **Spin Speed** and, at the same time, turn the programme selector to position 2.
✓ The display shows the current value.
3. Use the programme selector to select the required basic setting.
→ *Page 32*
4. To change the value, press **Finish In**.
5. To save the changes, switch off the appliance.

16 Cleaning and servicing

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.


16.1 Cleaning the drum

⚠ **CAUTION**
Risk of injury!
Permanently washing at low temperatures and a lack of ventilation for the appliance may damage the drum and cause injury.
- Regularly run a programme for cleaning the drum or wash at temperatures of at least 60 °C.
- Leave the appliance to dry after every operation with the door open, and leave the detergent drawer to dry.


- Run the **Drum Clean** programme without laundry but with washing powder that contains oxygen bleach or a a cleaning agent for caring for the inside of the appliance.
→ *"Accessories", Page 28*

16.2 Cleaning the detergent drawer


1. Pull out the detergent drawer.
2. Press down on the insert and remove the detergent drawer.

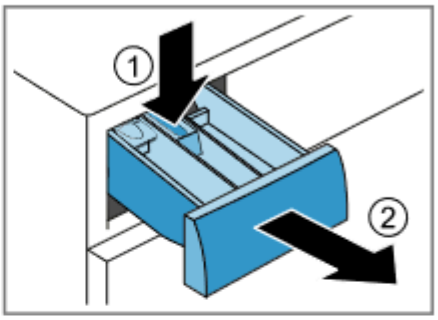

3. Pull out the insert upwards.

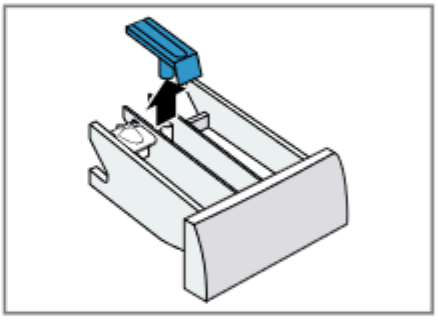


4. Clean the detergent drawer and insert with water and a brush, and then dry them.

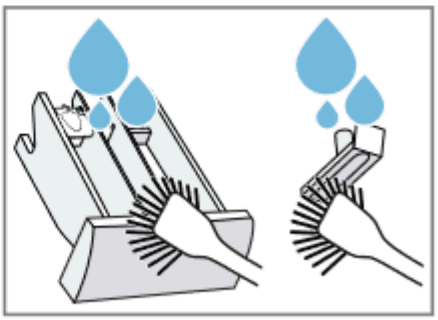

Further information and explanations are available online:

5. Fit the insert and click it into place.

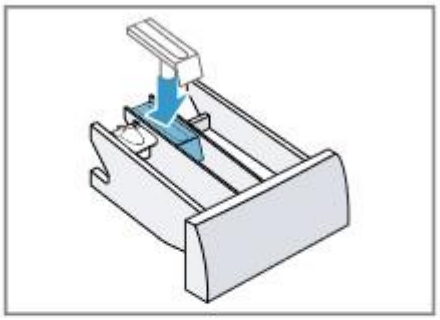

6. Clean the opening for the detergent drawer.



7. Push in the detergent drawer.

Further information and explanations are available online: