FRAMTID

GB
DE
FR
IT


OV9

Design and Quality
IKEA of Sweden

Heruntergeladen von manualslib.de Handbücher-Suchmachiene

Product description

General overview

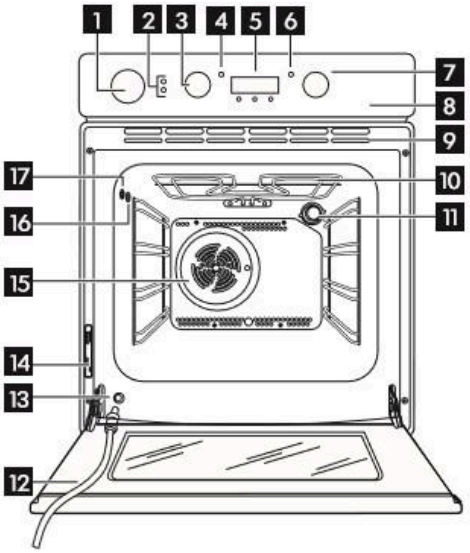

1 Water tank
2 Water tank indicators
3 Temperature control knob
4 Temperature indicator
5 Electronic timer
6 Power indicator
7 Control knob for the oven function
8 Control panel
9 Air vents for cooling fan
10 Grill
11 Oven lamp
12 Water outlet hose
13 Water outlet valve
14 Rating plate
15 Fan
16 Steam inlet opening
17 Meat probe socket

Oven accessories

Dripping pan



1x

Baking tray



1x

Grid



1x

Daily use

Switching the appliance on
Set the oven function and the temperature.

Setting the temperature
Turn the temperature control knob (refer to "Product description"). You can set the temperature between 50 °C and 250 °C.

Setting the oven function
Turn the control knob for oven functions (refer to "Product description").

Switching the appliance off
Turn the temperature and oven functions control knobs to the off position.

Oven functions

Oven function	Application
0	OFF position
	Oven lamp- comes on without any cooking function.
	Conventional cooking - heats both from the top and bottom element. To bake and roast on one oven level.
	Top heating element - heats only from the top of the oven. To finish cooked dishes.
	Bottom heating element - heats only from the bottom of the oven. To bake cakes with crispy or crusty bases.
	Full grill - the full grill element is on. To grill flat food items in large quantities. To make toasts.
	Thermal grilling - the grill element and the oven fan operate alternately and circulate hot air around the food. To cook large pieces of meat. Do not use this function in the temperature over the 200°C.
	Fan cooking - to roast or roast and bake the food that requires the same cooking temperature, using more than one shelf, without flavour transference.
	Defrost - thaws frozen food. The temperature control knob must be on off position.
	Pizza - the bottom element provides direct heat to the base of pizzas, quiches or pies, while the fan ensures air is circulated to cook the pizza toppings or pie fillings.
	Steam cooking - to bake, to roast, to warm up frozen or chilled food. Also to prepare fruits, vegetables, fish, potatoes, rice and pasta.

Power indicator

The power indicator (refer to "Product description") comes on when the control knob for oven function is set.

Temperature indicator

The temperature indicator (refer to "Product description") comes on when the oven heats up. It goes off when the oven reaches the correct temperature. It then cycles on and off to show the temperature adjusts.

Safety thermostat


To prevent dangerous overheating (through incorrect use of the appliance or defective components), the oven is fitted with a safety thermostat, which interrupts the power supply. The oven switches back on again automatically, when the temperature drops.
Should the safety thermostat fail to work, do not attempt to fix it yourself. Please contact After Sales Service.

The cooling fan

The cooling fan (not visible) keeps the front panel, the knobs and the oven door handle cool. When the oven is on the cooling fan switches on automatically. Warm air blows out through the air vents near the oven door handle. To keep the controls cool, the cooling fan can still run after the oven is off.

Mechanical child lock


The appliance is delivered with fixed and activated child lock. It is situated just below the oven control panel on the right side.

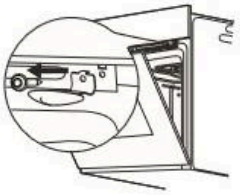

To remove the child lock open the oven door and unscrew it using the torx key included in the oven fitting bag.

Clock functions

Symbol	Function	Description
⊢→⊣	Cooking duration	To set how long the oven is to be in use
→⊣	End of cooking	To set when the oven is to switch off
⊢→⊣→⊣	Cooking duration and End of cooking combined	To set delayed start of the appliance
🔔	Minute minder	To set a countdown. A signal sounds when the time elapses
🕒	Clock	To set the time of the day
	Meat probe	Measures the core temperature while roasting larger pieces of meat

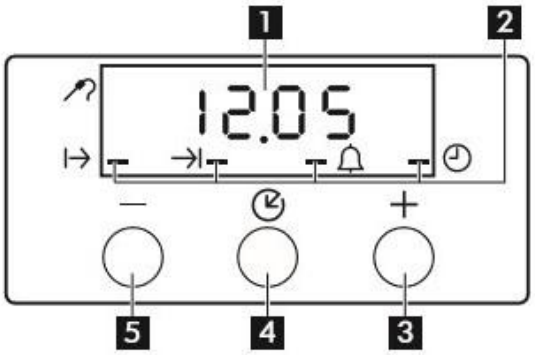

1 Time and meatprobe temperature display
2 Function indicators
3 Button " + "
4 Selector button
5 Button " - "

Setting the clock functions

- Push selector button again and again until the desired function indicator flashes.
- To set or modify the time use" + " / " - " in the next 5 seconds. After that the set time begins to run.

Cancelling the clock function

Push selector button again and again until the function indicator shows the right function and push " - " button. After few seconds the clock function goes out.

Switching off the display

ⓘ You can save energy by switching off the clock display.

1. Push " **+** " and " **-** " buttons at the same time and hold for 5 seconds.
   The display switches off.
2. To switch on the display push any button.

What to do if...

Problem	Possible cause	Solution
The oven does not operate	The required setting have not been set	check if cooking function and temperature are selected
The oven does not operate	The appliance is not correctly connected or/and the mains supply to the oven is not on	Check if the appliance is correctly connected and the mains supply to the oven is on
The temperature indicator does not come on	The required setting have not been set	Select the cooking function and temperature
The oven lamp is not working	The oven lamp bulb is faulty	Replace the oven lamp bulb
Steam and condensation settle on the food and in the oven cavity	Dishes have been left in the oven for too long	Do not leave the dishes standing in the oven for longer than 15-20 minutes after the cooking process ends
"12.00" appears on the display and the clock LED is flashing	Interruption of the power supply	Reset the time

If there is a fault, first try to find a solution to the problem yourself. If you cannot find a solution to the problem yourself, contact your dealer or the After Sales Service.

ⓘ If you operated the appliance wrongly, or the installation was not carried out by a registered engineer, the visit from the After Sales Service technician or dealer may not take place free of charge, even during the warranty period.